


8*10cm (正反面印刷)



Installation Method

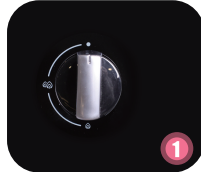

1.Wipe clean the installation place.



2.Tear off the cover of 3M stickers.



3.Paste the stove knob cover at the gas switch position.

The height of the stove knob should be less than 1.57", and the diameter should be less than 1.65".



Features

- 1.Prevent children from opening stove and getting injured.
- 2.Prevent babies from pulling the gas knob away and lost them.



Tips

- Please do not use the product for other purpose.
- The product can not substitute for adult and perform supervision on children.
- Please stop using in case of damage to the product.

WARNING!

To avoid danger of suffocation,keep this plastic bag away from babies and children.Do not use this bag in cribs,beds,carriages,or playpens. This bag is not a toy.